





Installs into both upper sides of sash. Fasten with #8 screw as shown at right.

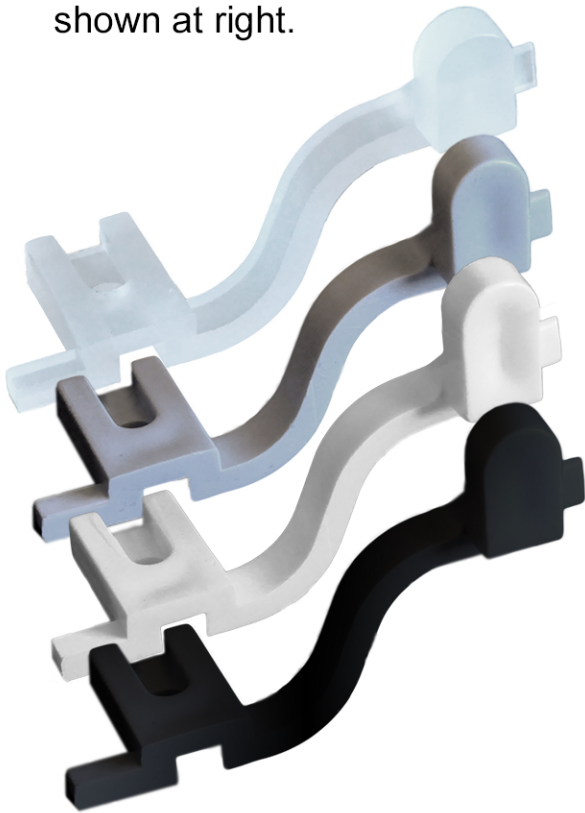

<u>ITEM #</u>	<u>Cam ht.</u>	<u>Color</u>
5645-101	.450"	natural (clear)
5893	.490"	gray
5976-100	.530"	white
5894-100	.575"	black

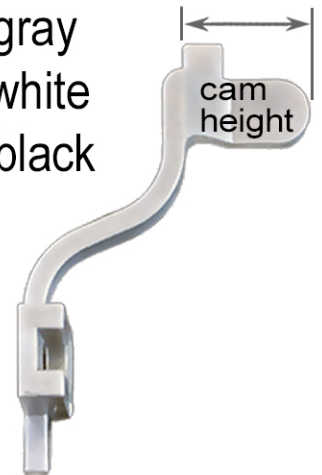

You  **Tube**

Watch the demo video here:

www.youtube.com/watch?v=weMBbQTp5_U

ph: 215-368-7700

fx: 215-368-9019

www.springcompany.com

sales@springcompany.com

**JOHN
EVANS'
SONS** Est. 1850

SPRINGS MADE BETTER